

Cruzer Contour USB Connector Open/Close Operation

SanDisk®

To open

Step 1
Slide
backwards
fully



Step 2
Slide
forward
fully



Step 3
Completely
open



To close

Step 1
Slide
forward
fully



Step 2
Slide
backwards
fully



Step 3
Completely
closed



80-13-02425